

What system do I need?

External halyard

The halyard at the standard flagpoles is outside. The halyard goes through a snap and is fixed by a cleat.

Internal halyard

The flag is theft protected and there is no noise of halyard ticking against the pole.

Turntop with banner boom

With the turntop you are independent of the wind, this system does not need wind to open your banner. Thanks to the turntop with banner lift you have always a perfect advertising feature. Changing the banner must be done by striking the flagpole.

Hoistable banner boom

The banner shows itself, wind or no wind. The hoistable banner lift takes care for an always open banner. Changing the banner can be done with the pole at an upright position.

